


Installation Guide for SGI Ethernet Firmware

Installation Instructions

1. Navigate to <https://www.powerandtest.com/products/dc-power-supplies/sg-series>
2. Download and install Flash Wizard – Ethernet Only Version 2.10 software to install new firmware.
3. Connect RS232 cable from PC to RS232 port on SG unit.

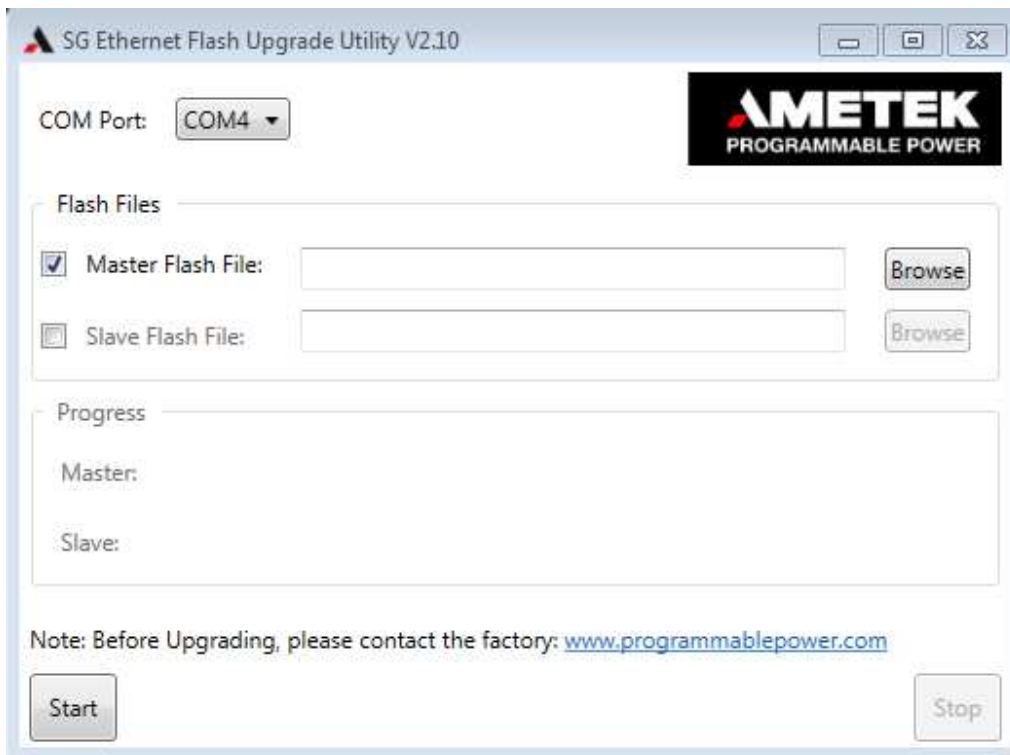

4. Select the "4p02_sgeilite_APP.s19" as the Master Flash File: and click "Start". Follow on screen prompts to complete installation.

NOTE: The Master and Slave Firmware can both be updated at the same time using the updater.