

Installation Guide for SGI RS232_GPIB Firmware

NOTE: The Master Firmware V2.80 requires Slave Firmware V1.07

Installation Instructions

1. Navigate to http://www.sorensen.com/products/SG/SG_Downloads.htm
2. Download and install Flash Wizard – **RS232_GPIB Only**
Version 1.0 (GPIB_4540102-01_signed) software to install new firmware.
3. Connect RS232 cable from PC to RS232 port on SG unit. Set SG RS232 baudrate to 19200 from the front panel.
4. Select the “2p80_RS232_GPIB_sga.abs” as the Flash File: and click “Start”. Follow on screen prompts to complete installation.

