



ELGAR
ETS150X5.6C
Photovoltaic Simulator
Operation and Maintenance Manual

Programmable Power Solutions

About AMETEK

AMETEK Programmable Power, Inc., a Division of AMETEK, Inc., is a global leader in the design and manufacture of precision, programmable power supplies for R&D, test and measurement, process control, power bus simulation and power conditioning applications across diverse industrial segments. From bench top supplies to rack-mounted industrial power subsystems, AMETEK Programmable Power is the proud manufacturer of Elgar, Sorensen, California Instruments and Power Ten brand power supplies.

AMETEK, Inc. is a leading global manufacturer of electronic instruments and electromechanical devices with annualized sales of \$2.5 billion. The Company has over 11,000 colleagues working at more than 80 manufacturing facilities and more than 80 sales and service centers in the United States and around the world.

Trademarks

AMETEK is a registered trademark of AMETEK, Inc.

Other trademarks, registered trademarks, and product names are the property of their respective owners and are used herein for identification purposes only.

Notice of Copyright

Terrestrial Solar Array Simulator, Operation and Maintenance Manual © 2014 AMETEK Programmable Power, Inc. All rights reserved.

Exclusion for Documentation

UNLESS SPECIFICALLY AGREED TO IN WRITING, AMETEK PROGRAMMABLE POWER, INC. ("AMETEK"):

- (a) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION.
- (b) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSSES, DAMAGES, COSTS OR EXPENSES, WHETHER SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK, AND
- (c) REMINDS YOU THAT IF THIS MANUAL IS IN ANY LANGUAGE OTHER THAN ENGLISH, ALTHOUGH STEPS HAVE BEEN TAKEN TO MAINTAIN THE ACCURACY OF THE TRANSLATION, THE ACCURACY CANNOT BE GUARANTEED. APPROVED AMETEK CONTENT IS CONTAINED WITH THE ENGLISH LANGUAGE VERSION, WHICH IS POSTED AT WWW.PROGRAMMABLEPOWER.COM.

Date and Revision

Feb 2014 Revision B

Part Number

M551066-05

Contact Information

Telephone: 800 733 5427 (toll free in North America)
858 450 0085 (direct)
Fax: 858 458 0267
Email: sales@programmablepower.com
PPSSupport.PPD@ametek.com
Web: www.programmablepower.com

This page intentionally left blank.

Important Safety Instructions

Before applying power to the system, verify that your product is configured properly for your particular application.

 WARNING	Hazardous voltages may be present when covers are removed. Qualified personnel must use extreme caution when servicing this equipment. Circuit boards, test points, and output voltages also may be floating above (below) chassis ground.
 WARNING	The equipment used contains ESD sensitive ports. When installing equipment, follow ESD Safety Procedures. Electrostatic discharges might cause damage to the equipment.

Only *qualified personnel* who deal with attendant hazards in power supplies, are allowed to perform installation and servicing.

Ensure that the AC power line ground is connected properly to the Power Rack input connector or chassis. Similarly, other power ground lines including those to application and maintenance equipment *must* be grounded properly for both personnel and equipment safety.

Always ensure that facility AC input power is de-energized prior to connecting or disconnecting any cable.

In normal operation, the operator does not have access to hazardous voltages within the chassis. However, depending on the user's application configuration, **HIGH VOLTAGES HAZARDOUS TO HUMAN SAFETY** may be normally generated on the output terminals. The customer/user must ensure that the output power lines are labeled properly as to the safety hazards and that any inadvertent contact with hazardous voltages is eliminated.

Guard against risks of electrical shock during open cover checks by not touching any portion of the electrical circuits. Even when power is off, capacitors may retain an electrical charge. Use safety glasses during open cover checks to avoid personal injury by any sudden component failure.

Neither AMETEK Programmable Power Inc., San Diego, California, USA, nor any of the subsidiary sales organizations can accept any responsibility for personnel, material or inconsequential injury, loss or damage that results from improper use of the equipment and accessories.

SAFETY SYMBOLS



WARNING
Risk of Electrical Shock



CAUTION
Refer to Accompanying Documents



Off (Supply)

— Direct Current (DC)



Standby (Supply)

~ Alternating Current (AC)



On (Supply)

3~ Three-Phase Alternating Current



Protective Conductor Terminal



Earth (Ground) Terminal



Fuse



Chassis Ground

This page intentionally left blank.

Product Family: Photovoltaic Simulator

Warranty Period: One Year

WARRANTY TERMS

AMETEK Programmable Power, Inc. ("AMETEK"), provides this written warranty covering the Product stated above, and if the Buyer discovers and notifies AMETEK in writing of any defect in material or workmanship within the applicable warranty period stated above, then AMETEK may, at its option: repair or replace the Product; or issue a credit note for the defective Product; or provide the Buyer with replacement parts for the Product.

The Buyer will, at its expense, return the defective Product or parts thereof to AMETEK in accordance with the return procedure specified below. AMETEK will, at its expense, deliver the repaired or replaced Product or parts to the Buyer. Any warranty of AMETEK will not apply if the Buyer is in default under the Purchase Order Agreement or where the Product or any part thereof:

- is damaged by misuse, accident, negligence or failure to maintain the same as specified or required by AMETEK;
- is damaged by modifications, alterations or attachments thereto which are not authorized by AMETEK;
- is installed or operated contrary to the instructions of AMETEK;
- is opened, modified or disassembled in any way without AMETEK's consent; or
- is used in combination with items, articles or materials not authorized by AMETEK.

The Buyer may not assert any claim that the Products are not in conformity with any warranty until the Buyer has made all payments to AMETEK provided for in the Purchase Order Agreement.

PRODUCT RETURN PROCEDURE

1. Request a Return Material Authorization (RMA) number from the repair facility (**must be done in the country in which it was purchased**):
 - **In the USA**, contact the AMETEK Repair Department prior to the return of the product to AMETEK for repair:
Telephone: 800-733-5427, ext. 2295 or ext. 2463 (toll free North America)
858-450-0085, ext. 2295 or ext. 2463 (direct)
 - **Outside the United States**, contact the nearest Authorized Service Center (ASC). A full listing can be found either through your local distributor or our website, www.programmablepower.com, by clicking Support and going to the Service Centers tab.
2. When requesting an RMA, have the following information ready:
 - Model number
 - Serial number
 - Description of the problem

NOTE: Unauthorized returns will not be accepted and will be returned at the shipper's expense.

NOTE: A returned product found upon inspection by AMETEK, to be in specification is subject to an evaluation fee and applicable freight charges.

This page intentionally left blank.

TABLE OF CONTENTS

SECTION 1 PRODUCT OVERVIEW	5
1.1 Introduction.....	5
1.2 User Interface.....	5
1.3 Applicable Elgar Part Numbers.....	5
1.4 PV Simulator Block Diagram	6
1.5 ETS150X5.6C Specifications.....	7
1.6 Mechanical drawings	10
SECTION 2 INSTALLATION	12
2.1 Unpacking and Inspection	12
2.2 Electrical Connections	13
2.2.1 AC Input.....	13
2.2.2 DC Output.....	13
2.2.3 Ethernet.....	13
2.2.4 USB	14
2.2.5 AUX I/O	14
2.3 Rear panel switches and indicators	15
2.4 Front Panel status indicator.....	15
2.5 System assembly recommendations	16
SECTION 3 OPERATION.....	18
3.1 Connecting to a Computer.....	18
3.1.1 Network configuration.....	18
3.1.2 System configuration	20
3.2 Protections and Fault indicators	21
3.2.1 Over Temperature Protection (OTP).....	21
3.2.2 Over Power Protection (OPP).....	21
3.2.3 Over Current Protection (OCP).....	22

3.3	Test Setup and Application details.....	23
3.3.1	Microinverter test setup.....	23
3.3.2	Power optimizer test setup.....	24
3.3.3	Power optimizers feeding a solar inverter	25
3.3.4	Parallel connections.....	26
3.3.5	Series connections.....	27

SECTION 4 COMPUTER MANAGEMENT 28

4.1	Performing TerraSAS software updates	28
4.1.1	Step 1: Uninstall TerraSAS	28
4.1.2	Step 2: Install a new TerraSAS software release	29
4.2	Performing firmware updates	31

SECTION 5 CALIBRATION..... 34

5.1	Required equipment.....	34
5.2	Operation.....	34
5.3	Calibration interval	34

LIST OF FIGURES

Figure 1-1	PV Simulator block diagram.....	6
Figure 1-2	Front, side and top views	10
Figure 1-3	Front panel.....	11
Figure 1-4	Rear view	11
Figure 1-5	Rear I/O panel.....	11
Figure 3-1	Direct cable connection	18
Figure 3-2	Private network connection	19
Figure 3-3	Local area network connection.....	19
Figure 3-4	Dual network connection.....	20
Figure 3-5	Microinverter test setup	23
Figure 3-6	Test setup for a single power optimizer.....	24
Figure 3-7	Power optimizers feeding a solar inverter	25
Figure 3-8	PV Simulators connected in parallel.....	26
Figure 3-9	PV Simulators connected in series.....	27

LIST OF TABLES

Table 1	AC line cord wire colors.....	13
Table 2	DC output connections.....	13

Table 3 Auxiliary I/O connections.....	14
Table 4 Linear regulator temperature events	21

This page intentionally left blank.

SECTION 1

PRODUCT OVERVIEW

1.1 INTRODUCTION

The Elgar PV Simulator is a programmable digital power source designed to simulate the electrical behavior of terrestrial photovoltaic arrays. The simulator provides a turn-key hardware and software solution to deliver all the functionality required to test the maximum peak power tracking (MPPT) characteristics of solar inverters and charge controllers. The ability to simulate any fill factor and material technology allows the simulator to characterize the inverter's MPPT algorithm performance quickly and efficiently. It also allows to perform conversion efficiency, thermal analysis and dynamic performance tests by supplying a highly stable and repeatable stimulus to the inverter under test.

1.2 USER INTERFACE

The simulator front panel only features an on/off switch and a status indicator. The user interacts with the simulator through a remote Ethernet connection.

A single desktop or laptop computer running TerraSAS software can control up to 48 simulators. Due to the high transmission speed and data integrity provided by the Ethernet architecture, operating parameters are displayed in real time on the computer screen at refresh rates comparable to standard instrumentation.

The software allows modeling a PV panel from data normally found in the manufacturer data sheet. These parameters are V_{oc} (open circuit voltage), I_{sc} (short circuit current), V_{mp} (voltage at the maximum power point), I_{mp} (current at the maximum power point), β_v (voltage temperature coefficient) and β_p (power temperature coefficient).

In addition to static tests, the software allows to execute irradiance/temperature profiles that can closely duplicate real life conditions or predefined test sequences.

1.3 APPLICABLE ELGAR PART NUMBERS

ETS150X5.6C-PVF	150V, 5.6A, 100-240VAC
ETS150X5.6C-PVE	150V, 5.6A, 100-240VAC

1.4 PV SIMULATOR BLOCK DIAGRAM

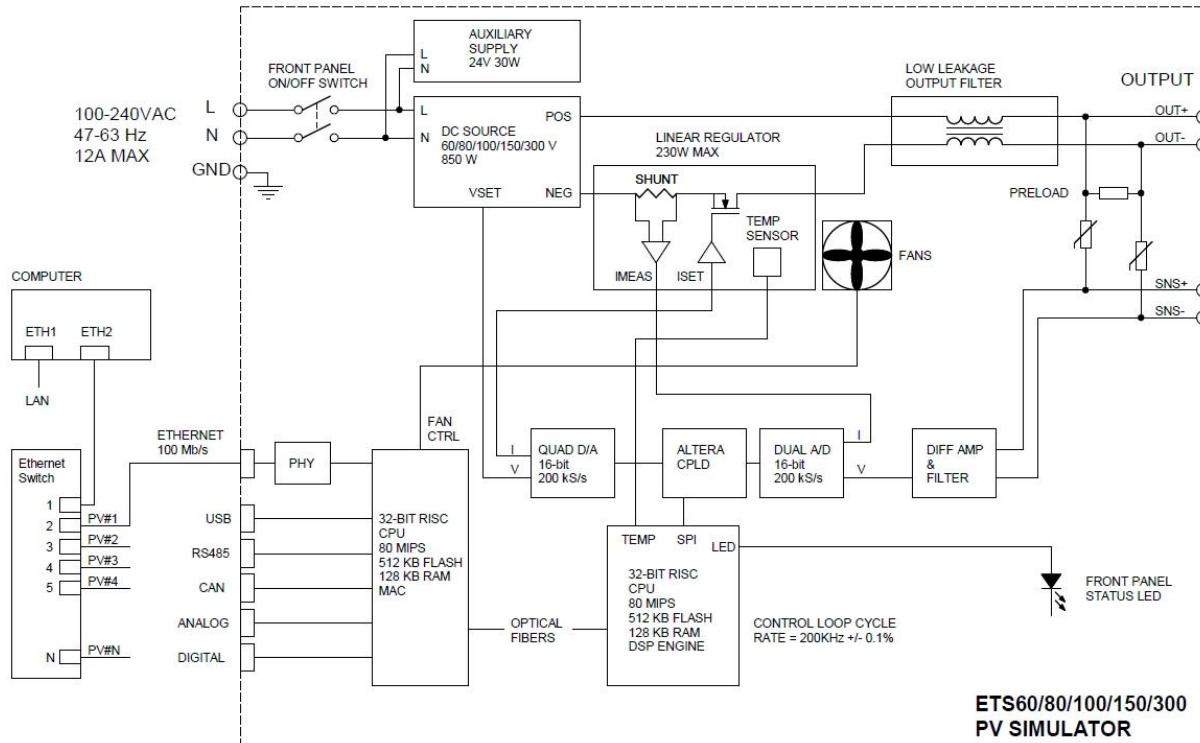


Figure 1-1 PV Simulator block diagram

At the heart of the PV simulator are two 80 MIPS RISC microcontrollers.

One processor interfaces with a 16-bit measurement and control system that monitors the output voltage and current at 5 μ s intervals.

At each interval, the processor sends computed data to its 16-bit D/A control system that adjusts the dc source and linear regulator to follow the programmed IV curve.

The other processor supports the Ethernet interface, analog and digital I/O.

While in static simulation mode, the simulator executes a single IV curve.

In the PV Simulator memory, an IV curve is represented by 1,024 data pairs or points. Each pair of values represents a single voltage / current point on the IV curve.

The PV simulator interpolates the 1,024 points in its curve memory with 16-bit accuracy, delivering an actual curve resolution of 65,536 points.

When irradiance / temperature profiles are executed, dynamically updated IV curves are downloaded at fixed 1-second intervals. The PV simulator linearly interpolates between consecutive curves 128 times per second (7.8 ms intervals), delivering smooth voltage and current waveforms to the unit under test.

1.5 ETS150X5.6C SPECIFICATIONS

<u>DC Output</u>	Open Circuit Voltage, Voc: 150 V Short Circuit Current, Isc: 5.6 A
	Maximum output power 714 W at fill factor 0.85
<u>Maximum Output Voltage</u>	165 V between positive and negative output and sense terminals
<u>Output isolation</u>	± 1000 Vpk, positive or negative output to chassis ground, continuous
<u>Output leakage</u>	Output to chassis ground, DC : > 100 M Ω Output to chassis ground, AC : 0.045 μ F typical
<u>Tracking speed</u>	Compatible with micro-inverters sweeping the MPP at up to 250 Hz and power optimizers.
<u>Accuracy</u>	Voltage programming and readback: $\pm 0.2\%$ of full scale voltage Current programming and readback: $\pm 0.5\%$ of full scale current
<u>Sampling resolution</u>	Voltage and current are synchronously sampled by two independent 16-bit A/D converters at 200 kS/s.
<u>Curve Resolution</u>	1,024 points. Each point represents a single voltage / current point on the IV curve. The PV simulator interpolates the 1,024 points in its curve memory with 16-bit resolution, delivering an actual curve resolution of 65,536 points.
<u>Profiles resolution</u>	There is no limit to the profile length. One-second profiles for a full day of simulation are typically 50k points. The simulator interpolates between points 128 times per second, delivering smooth voltage and current waveforms that closely resemble real solar arrays under cloudy conditions (requires TerraSAS software)
<u>Curve equations</u>	Equations used to calculate and translate the IV curves are found in Appendix A1 and A2 of the publication "Performance test Protocol for Evaluating Inverters Used in Grid-Connected Photovoltaic System", October 2004, Sandia National Labs and in the EN50530 standard.
<u>PV Array Parameters</u>	Irradiance level: 0 to 1999 W/m ² Temperature value: -100°C to +100°C Voltage level: 0 to 150 VDC Current level: 0 to 5.6 A Voltage and power temperature coefficients: $\pm 1.99\%/\text{°C}$
<u>Expansion</u>	Up to 48 units can be controlled by a single PC running TerraSAS Software

<u>Available I/O</u>	Ethernet 10/100 Mb/s: TerraSAS software proprietary high-speed link. Analog Irradiance/Temperature inputs: allow to adjust the IV curve in real time based on two external analog signals. Trigger input: allows to start executing an irradiance/temperature profile in sync with external equipment. Useful for accurate energy measurements using external power analyzers. SCPI interface: through TerraSAS software
<u>Remote sense</u>	Maximum line drop 1V per line
<u>Input Nominal Voltage</u>	Single phase + ground 100-240 VAC nominal (operating range 85 - 264 VAC)
<u>Input Frequency</u>	47 – 63 Hz
<u>Power Factor</u>	>0.99 typical
<u>OVP Accuracy</u>	0.2% of full scale voltage
<u>OVP Resolution</u>	0.002% of full scale voltage
<u>Output noise</u>	< 0.6 Vpp measured across a 1 μ F capacitor at the end of a 1.8m (6ft) line at full load, 20 MHz bandwidth
<u>Current noise</u>	< 60 mA μ p-p at maximum output current, 650 kHz bandwidth
<u>Efficiency @ MPP</u>	67% typical with V_{oc} =150V, I_{sc} =5.6A, V_{mp} =129.2V, I_{mp} =5.31A, 100 VAC input 70% typical with V_{oc} =150V, I_{sc} =5.6A, V_{mp} =129.2V, I_{mp} =5.31A, 200 VAC input
<u>Stability</u>	\pm 0.05% of set point after 30 minute warm-up and over 8 hours at fixed line, load and temperature, typical
<u>Temperature Coefficient</u>	0.02%/ $^{\circ}$ C of maximum output voltage rating for voltage set point, typical 0.03%/ $^{\circ}$ C of maximum output current rating for current set point, typical
<u>Operating Temperature</u>	0 to 40 $^{\circ}$ C
<u>Storage Temperature</u>	-25 $^{\circ}$ C to 65 $^{\circ}$ C
<u>Humidity Range</u>	Relative humidity up to 95% non-condensing, 0 $^{\circ}$ C – 40 $^{\circ}$ C
<u>Altitude</u>	Operating full power available up to 5,000 ft. (~1,500 m), derate 10% of full power for every 1,000 feet higher; non-operating to 40,000 ft. (~12,000 m)
<u>Cooling</u>	Front air inlet, rear exhaust. Temperature controlled variable speed fans. Units may be stacked without spacing.

<u>Regulatory</u>	CSA 22.2 No. 61010-1, 60950-1-07 and UL61010-1, UL60950-1-(2nd Ed) 12 . Marked with cCSAus, CE for EMC & low voltage directive
<u>Pollution degree</u>	2 (IEC 1010-1)
<u>EMC Directive</u>	EN 61326-1:2006
<u>Accessories</u>	Rack Slides, Elgar part number 105-375-08, qty 2 required
<u>Physical</u>	Width 19.00 in (48.3 cm) Depth 22.60 in (57.4 cm) Height 1.75 in (44.4 cm) Weight 21 lbs (9.5 kg)

IMPORTANT



This product is designed to test microinverters and optimizers commonly used in terrestrial solar energy conversion systems. Any other application is not supported and can cause permanent damage to the unit. In case of doubt, please request a detailed engineering review through your sales representative.

Testing the following devices is specifically discouraged and can cause failures that may not be covered under warranty repair:

- Shunt or series switching circuits widely used on spacecraft regulators. High frequency switching directly applied to the output can boost the output voltage above the specified maximum or cause inductive currents to flow into the internal regulators.
- Motors, pumps or any load that can store inductive energy and drive current back into the output of the simulator.
- Loads that continuously operate beyond the maximum power point (output current between I_{mp} and I_{sc}) cause the overpower protection to trip. See section 3.2.2 for more details.

1.6 MECHANICAL DRAWINGS

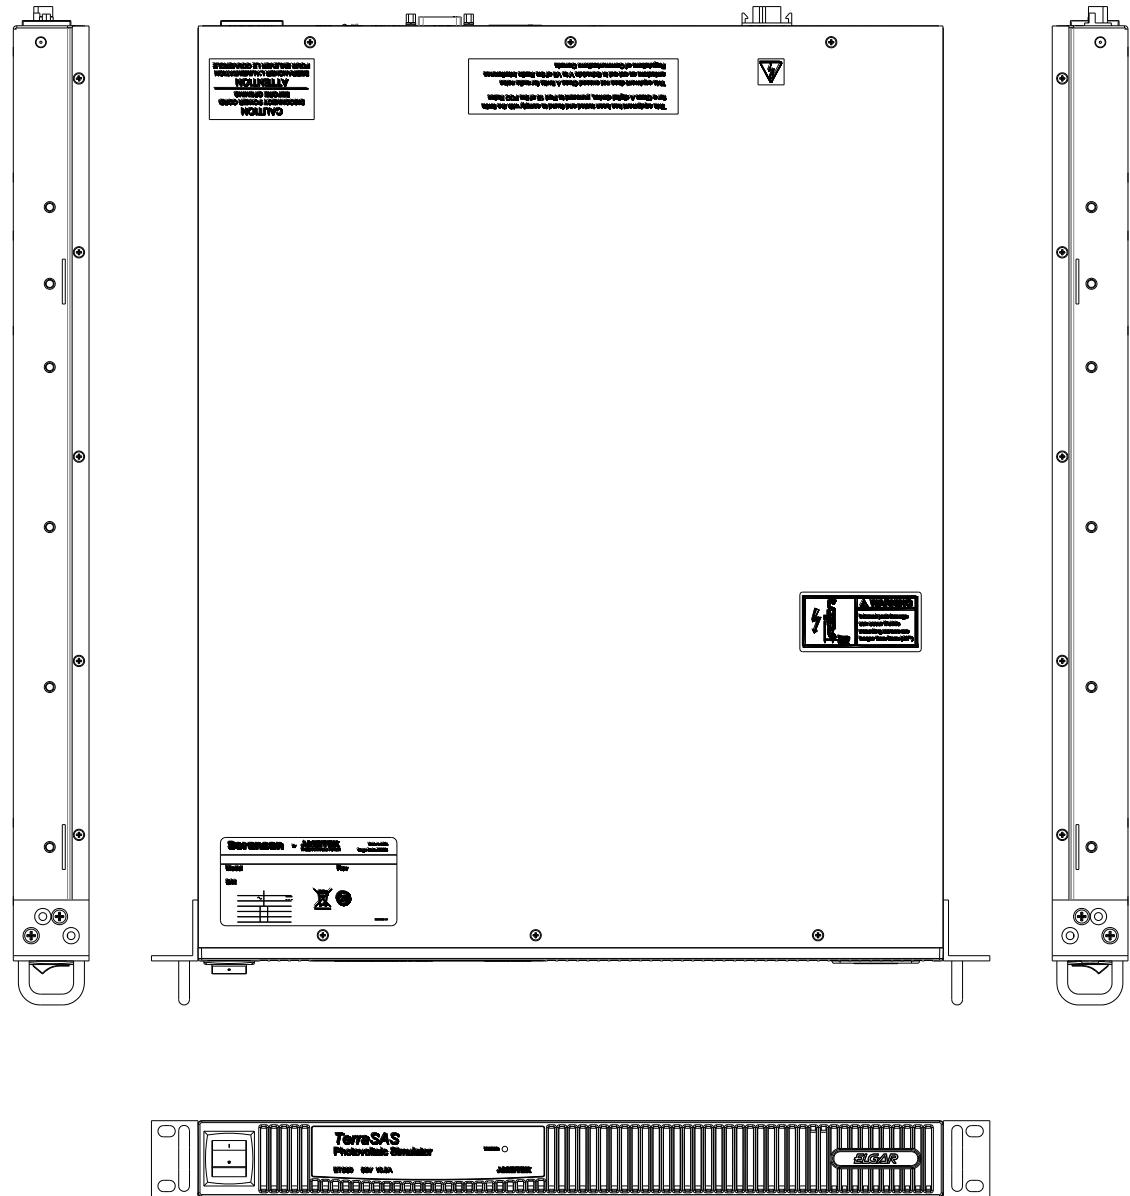


Figure 1-2 Front, side and top views




Figure 1-3 Front panel




Figure 1-4 Rear view

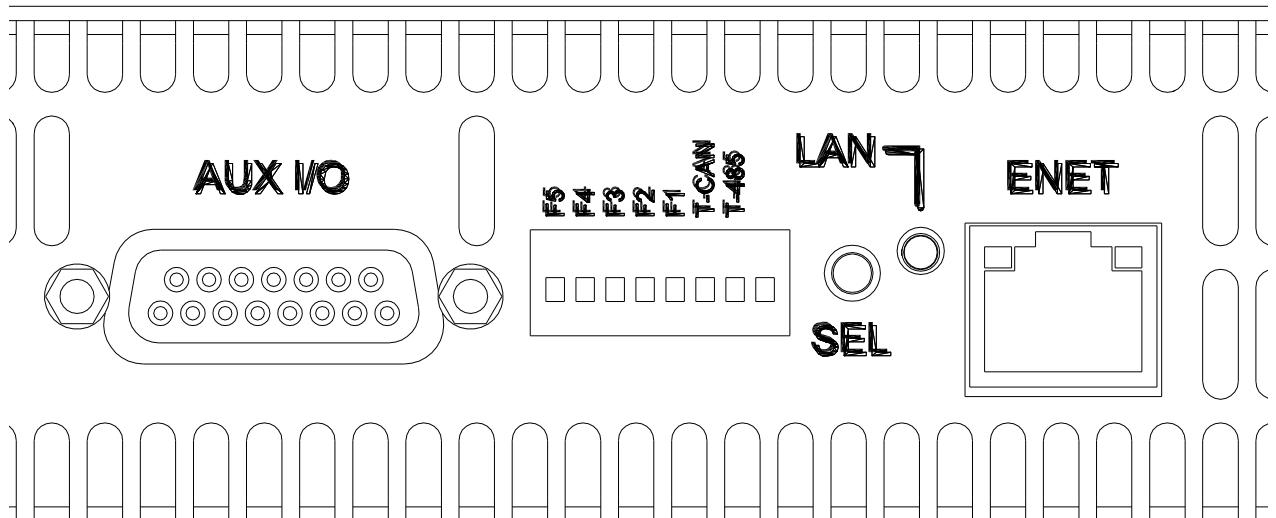


Figure 1-5 Rear I/O panel

SECTION 2

INSTALLATION

2.1 UNPACKING AND INSPECTION

After unpacking the unit, inspect the contents for any obvious physical damage. If damage has occurred, contact the shipper of the hardware. If replacement parts are required, contact Ametek Customer Service at 1-800-733-5427, ext. 2295 or 858-450-0085, ext. 2295.

The following items should be included:

<u>ELGAR P/N</u>	<u>DESCRIPTION</u>	<u>QTY</u>
5609520-01	CABLE ASSY,DC OUTPUT -ETS	1
890-890-72	CORD SET,15A,125V,USA/CANADA	1
890-006-05	CABLE,8P,RJ45,SHIELD,CAT5e,5FT	1
856-017-06	CONN,6P,HOUSING,MALE PLUG	1
856-008-0Y	CONN,CONT,14-16AWG,CRP,PIN	6
856-247-15	CONN,BACKSHELL,15P,D-SUB,2 PC	1
856-DA1-5P	CONN,15P,D-SUB,SOLDER CUP,PIN	1
110-032-01	SCREW,10-32 X .500,BLACK 27038	4
110-M5F-08	SCREW,M5 X 8MM,PFH,CS,ZN PLATE	10
M551066-05	MANUAL,PVSIM,ETS150 -TSAS	1
5609155-06	S/W,TERRASAS,V1.7.3.0 -TSAS	1

Extra items can be supplied on request.

Customized AC and DC cable assemblies can also be ordered.
Please contact the factory for details.

2.2 ELECTRICAL CONNECTIONS

2.2.1 AC Input

See figure 1-4 to locate the AC input receptacle. The supplied AC cord allows to power the unit from domestic wall outlets rated for 120V 13A. For rack mounted and international installations, remove the Nema (US style) plug. Strip the insulation jacket and connect the wires to a suitable terminal block or localized AC plug. Connections are as follows:

Wire color	AC line (100-240VAC, 50/60 Hz)
Black	Line 1
White	Line 2 or Neutral
Green	Earth ground

Table 1 AC line cord wire colors

2.2.2 DC Output

See figure 1-4 to locate the DC output receptacle. The supplied DC output cable allows to quickly connect the simulator to the device under test for bench-top operation. Remote sense lines are terminated at the alligator clips.

For rack mount installations, use the supplied mating connector and crimp contacts. Connections are listed below:

Terminal	Description
1	Positive output
2	Positive remote sense
3	Negative output
4	Positive output
5	Negative remote sense
6	Negative output

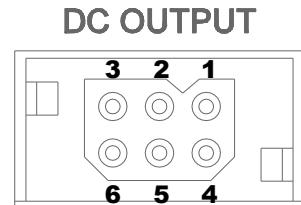


Table 2 DC output connections.

Terminal numbers are stamped on the body of the connectors.

Contacts p/n 856-008-0Y (Positronic p/n MC114N) can be crimped using tool AF-8 with positioner TH4. These are industry standard part numbers available from many electrical tooling distributors.

To maximize measurement accuracy, always connect the sense lines as close as possible to the device under test input terminals.

2.2.3 Ethernet

Use the supplied CAT-5e shielded patch cord or equivalent.



Shielded patch cords are required to meet EMC regulations and recommended to avoid data corruption due to interference from the device(s) under test.

2.2.4 USB

USB is not supported in the current firmware release and is intended for future use.

2.2.5 AUX I/O

This is a standard 15-pin female D-SUB connector. The mating connector is provided with the unit. Electrical signals are listed below:

AUX I/O CONNECTIONS				
MATING CONNECTOR TYPE: D-SUB 15 PIN MALE				
PIN #	DESCRIPTION	VOLTAGE	CURRENT	COMMENTS
1	CAN BUS H	CAN standard	<10 µA	Not supported by current firmware revision.
2	CAN BUS L			
3	RS-485 D+	RS-485 standard	<10 µA	Not supported by current firmware revision.
4	RS-485 D-			
5	IRRADIANCE INPUT	0 to 2.5V	<10 µA	0 to 1999 W/m ² (1)
6	TEMPERATURE INPUT	0 to 2.5V	<10 µA	-100°C to 100°C (1)
7	INTERLOCK +	24V ±20%	<3 mA	Output turns off if interlock signal is not present, unless interlock override is active (DIP switch F3). (2)
8	INTERLOCK -			
9	FAULT OUTPUT +	30V max	1A max	Not supported by current firmware revision.
10	FAULT OUTPUT -			
11	CAL RELAY +	30V max	1A max	Used by calibration fixture and software.
12	CAL RELAY -			
13	TRIGGER INPUT	0 to 5V	<2mA	Active low. (3)
14	REFERENCE VOLTAGE	2.5V	5 mA max	Precision voltage reference
15	SIGNALS GROUND			Analog and digital return
BODY	CHASSIS GROUND			Connect to cable shield

Table 3 Auxiliary I/O connections

NOTES:



- 1) See software user manual for details about monitoring these signals or allowing them to control an IV curve in real time.
- 2) The interlock input is isolated from ground and can tolerate up to ±100V from each input to chassis ground. This input is handled by the microcontrollers and is therefore not intended for safety-critical applications. Electromechanical relays or circuit breakers that remove the AC input to the simulator are required to meet safety regulations when failure to operate could harm human operators or otherwise represent a safety hazard.
- 3) This input accepts standard TTL/CMOS logic levels. It also accepts an isolated relay contact due to the internal pull-up resistor to +5V. When active, this signal starts executing a profile. See software user manual for details about loading and executing irradiance/temperature profiles.

2.3 REAR PANEL SWITCHES AND INDICATORS

8-POSITION SWITCH (see figure 1-5)		
SWITCH	DEFAULT POSITION	FUNCTION
T-485	OFF	RS-485 line termination (120 Ω)
T-CAN	OFF	CAN line termination (120 Ω)
F1	OFF	Not used
F2	OFF	Not used
F3	OFF	Interlock input override (desktop mode)
F4	OFF	Not used
F5	OFF	Firmware update mode

LAN FEATURES (see figure 1-5)		
ITEM	TYPE	FUNCTION
LAN	INDICATOR	LAN status
SEL	PUSHBUTTON	Select (used during system configuration)

2.4 FRONT PANEL STATUS INDICATOR

The front panel STATUS indicator (blue LED) visually reports one of five possible operating conditions. Blinking patterns are repeated every 2 seconds.

FRONT PANEL STATUS INDICATOR		
LIGHT PATTERN	STATUS	DESCRIPTION
Steady OFF	OFF	The simulator is turned off (front panel power switch off or no power)
Long pulse	IDLE	The simulator is turned on but not communicating with the system controller (PC). Output power is automatically turned off.
Steady ON	ON	The simulator is turned on and communicating with the system controller (PC).
One short pulse	OVP	Overvoltage protection tripped. Reduce the output voltage; turn the output off, then on to clear (see TerraSAS software manual)
Two short pulses	FAULT	Power module overheat or fault. Turn the front panel power switch off, then on to clear. Contact the factory if this condition becomes permanent and cannot be cleared.

2.5 SYSTEM ASSEMBLY RECOMMENDATIONS

When using a number of simulators to build a multi-channel rack system, the following information can be helpful.

- ❖ Use rack slides (Elgar p/n 105-375-08, qty 2 required) or steel brackets to properly support the weight of the simulators.

 Use the supplied M5x8mm screws to install the rack slides. Longer screws will damage the unit.

- ❖ Ensure adequate ventilation is provided to avoid excessive temperatures. Elevated temperatures reduce the life of the unit and can cause over-temperature protections to trip.
- ❖ Solar inverters can produce EMI fields, both radiated and conducted. On the control computer, it is advisable to avoid using touch-pads as this technology is very sensitive to RF fields and will likely malfunction. Optical trackballs or mice provide the best results. Optical isolation on USB keyboards is recommended to avoid possible lock-ups and erratic operation. Suitable USB isolators can be purchased from Ametek (isolator p/n 881-004-06 and short A-B cable p/n 890-504-03). USB isolators need to support the USB 1.1 low speed protocol (1.5 Mbits/s) in order to work properly with most keyboards.
- ❖ Keep data and control lines wiring as far as possible from AC and DC power and sense lines.
- ❖ Always use shielded Ethernet cables.
- ❖ Use shielded cable for all signals connecting to the AUX I/O connector. Connect the shield to the connector body.
- ❖ When connecting to transformer-less inverters, use wire, terminal blocks and connectors rated for 1000V operation on all output and sense wiring.

This page intentionally left blank.

SECTION 3

OPERATION

3.1 CONNECTING TO A COMPUTER

The TerraSAS software can control one or more PV simulators over a single Ethernet link. The CD that comes with the unit contains the installation files and the software user manual in Adobe PDF format. Detailed installation instructions are included in the manual. After installing the software, follow the instructions below to establish communication with one or more PV simulators.

3.1.1 Network configuration

The easiest way to connect to a single PV simulator is outlined below:


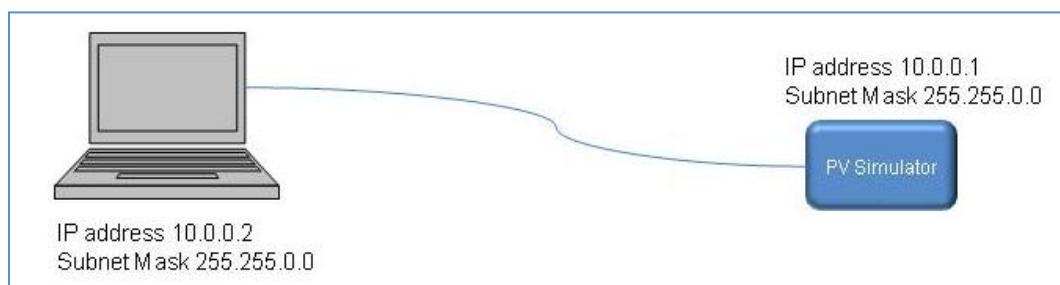


Figure 3-1 Direct cable connection

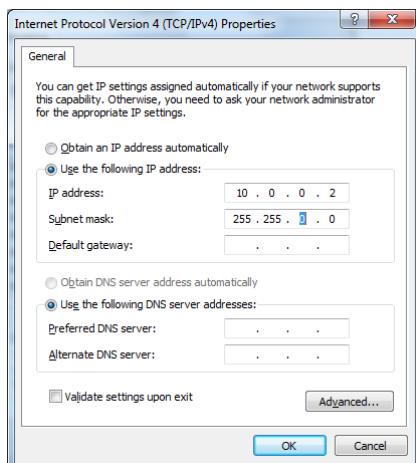

Simply access the Ethernet adapter Properties page and set as indicated.

With this topology, a static IP address is manually assigned to the computer.

When the PV simulator is turned on, it defaults to IP address 10.0.0.1 and communication is immediately established.

This method cannot be used to control two or more simulators.

When controlling more than one PV simulator, an Ethernet switch is required:

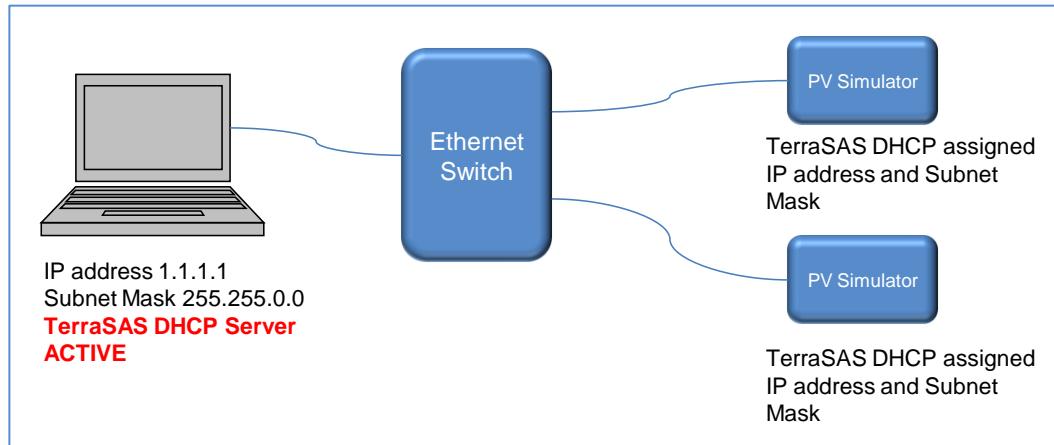


Figure 3-2 Private network connection

When setting the computer's IP address to 1.1.1.1, the TerraSAS DHCP server is automatically enabled. In this topology, always make sure that the computer is turned on and a user is logged in before turning on the PV simulators. Within a few seconds, all PV simulators are assigned an IP address. When this happens, the LAN LED on the rear panel (see figure 1-5) starts blinking faster. This confirms that the Ethernet network is active and working properly.

If desired, the Ethernet switch can be connected to the Local Area Network:

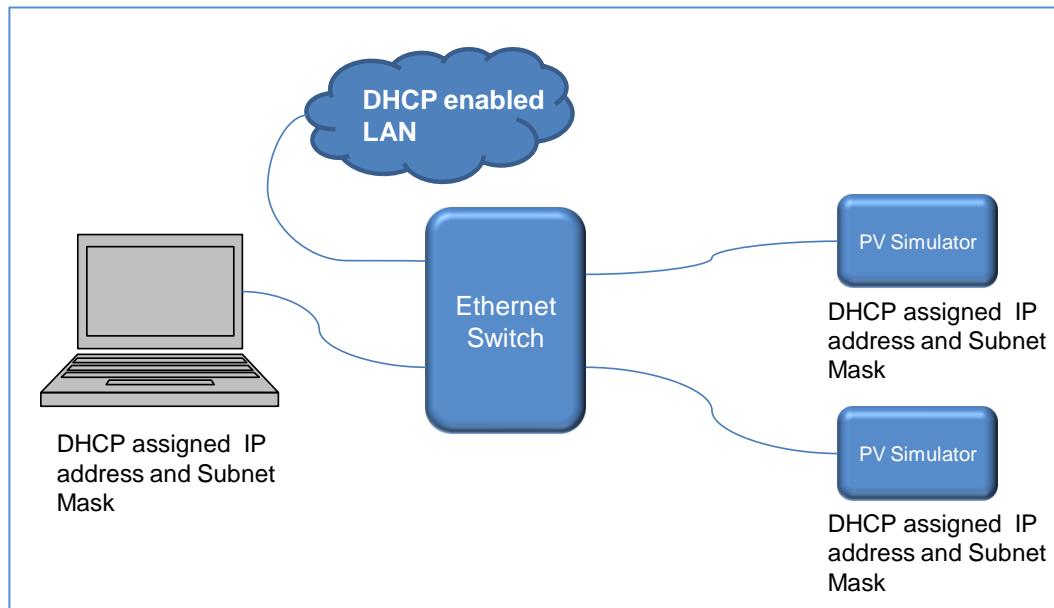


Figure 3-3 Local area network connection

In this topology, the Ethernet adapter must be configured for DHCP ("Obtain an IP address automatically" and "Obtain DNS server address automatically", see screenshot on previous page.)

The advantage of this method is that PV simulators and computers can be located anywhere on the LAN, as long as they share the same subnet (network segment behind a router).

The disadvantage is that PV simulators are accessible to any computer on the LAN, which could lead to unauthorized access and safety hazards.



Never set the computer IP address to 1.1.1.1 in this topology, as the TerraSAS DHCP server will interfere with the LAN's DHCP server and cause serious service disruptions.

When it is desirable to control the TerraSAS computer from a remote location, a computer featuring two Ethernet adapters is recommended:

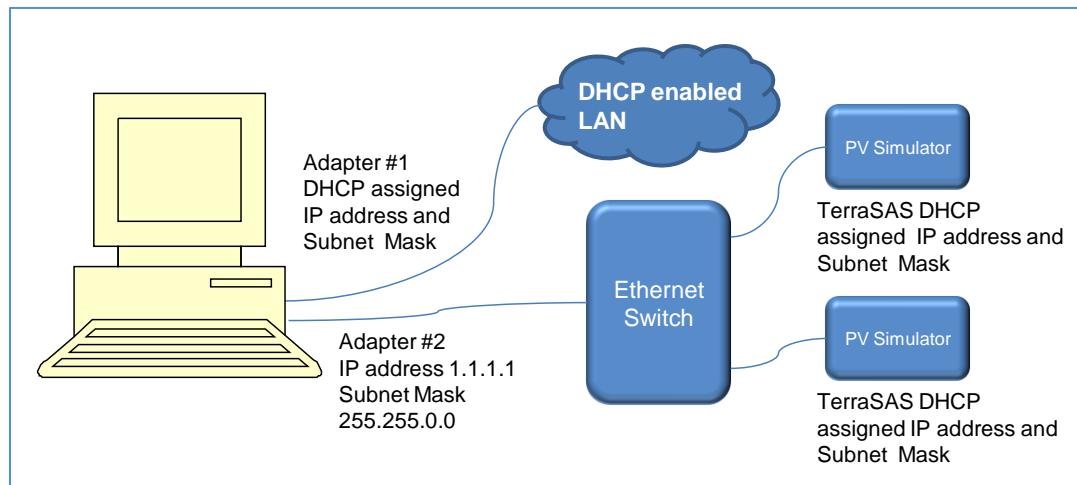


Figure 3-4 Dual network connection

See the software user manual for software configuration details and one-time DHCP server startup procedures.

3.1.2 System configuration

Once the desired network has been wired and configured, launch TerraSAS. The software will inform that a system configuration table needs to be created and automatically opens the appropriate form. The purpose of the configuration table is to establish which PV simulators are to be controlled and what channel number should be assigned to each one. Once the system configuration table has been created and stored, TerraSAS will only communicate with the specified simulators, in the order that has been selected. Up to four configuration tables can be stored and retrieved, allowing additional flexibility. Detailed system configuration instructions are described in the software user manual and are also shown on the configuration form that opens in the software.


Do not begin configuring a system until all simulators have acquired an IP address. Network communication must be healthy before the PC can discover and connect to the simulators.

3.2 PROTECTIONS AND FAULT INDICATORS

The ETS150 features several protections that are designed to prevent damage to the unit when operating limits are exceeded. When one or more fault conditions occur, the FLT indicator turns red (TerraSAS software) and the unit's front panel status LED shows the two-pulse sequence (see section 2.4).

3.2.1 Over Temperature Protection (OTP)

The temperature of the linear regulator module is monitored by a precision sensor. The reading is always displayed when placing the cursor on the FLT indicator. If the temperature exceeds 70 °C, operation continues but the FLT indicator turns yellow, warning that the over-temperature protection will soon trip. When the temperature reaches 75 °C the FLT indicator turns red and the power module is turned off. Operation resumes as soon as the temperature drops below 75 °C.

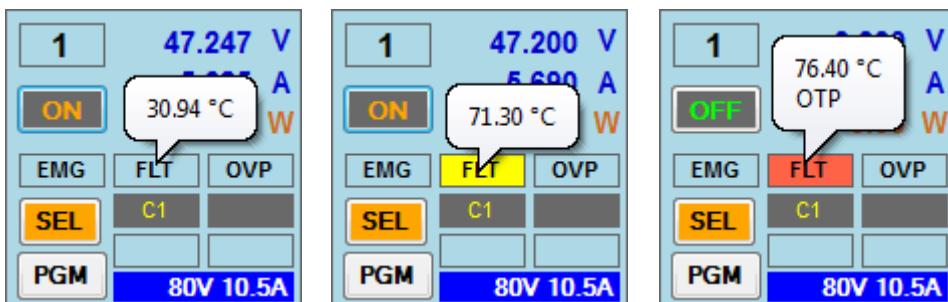

The table below summarizes all temperature-related events:

Temperature range	Event description
Below 25 °C	Fans speed is 40% of maximum
Between 25 °C and 65 °C	Fans speed linearly increases to 100% of maximum
Between 70 °C and 75 °C	Warning, the FLT indicator turns yellow
Above 75 °C	Over temperature, the FLT indicator turns red and the output is turned off
Above 90 °C	Safety thermostat trips and protects the unit in case of temperature sensor malfunction

Table 4 Linear regulator temperature events

3.2.2 Over Power Protection (OPP)

The linear regulator is rated for continuous operation when its power dissipation is below 230W, which is the worst case condition when the load operates at the maximum power point.



The linear regulator is not designed to handle the full rated power of the unit and might shut down if the output is shorted. Therefore this product cannot be used with shunt-switching solar regulators and any load that does not operate near the maximum power point.

The power dissipated on the linear regulator depends on IV curve parameters and output load. It can be calculated as follows:


$$P = (V_{oc} + 3 - V_{mp}) * I_{mp}$$

when the load operates at the maximum power point.

This is because the dc source feeding the linear regulator is always operated 3V above V_{oc} , see block diagram in section 1.4.

The table below shows the amount of time the unit will operate under overload conditions:

Linear regulator power dissipation (Watts)	Protection trip time (seconds)
231	61.0
300	0.90
400	0.40
840	0.10

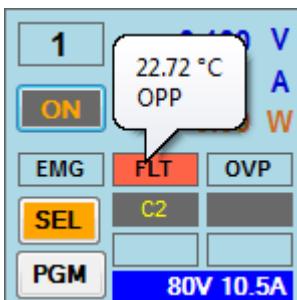


When the protection trips, the FLT indicator turns red and the power module is turned off.
When placing the cursor over the FLT indicator, the type of fault (OPP) is shown.

To clear the fault, turn off the unit and then turn it back on.

3.2.3 Over Current Protection (OCP)

Instantaneous current transients above 150% of the maximum rated current will trip the over-current protection.

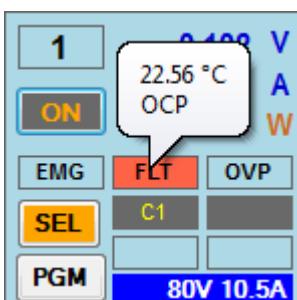

When the protection trips, the FLT indicator turns red and the power module is turned off.
When placing the cursor over the FLT indicator, the type of fault (OCP) is shown.

To clear the fault, turn off the unit and then turn it back on.

3.3 TEST SETUP AND APPLICATION DETAILS

Carefully read the installation manual of the solar inverter, micro-inverter or battery charger before connecting it to the PV simulator.

In particular, make sure the maximum V_{oc} is never exceeded to avoid damaging the device under test.

It is strongly recommended to set the overvoltage protection at or below the maximum input voltage of the DUT to avoid accidentally damaging it.

OVP settings and indicators are covered in the TerraSAS software user manual, p/n M609155-01, which is included in PDF format in the software disk that comes with the unit.

The ETS150 has isolated DC outputs and supports negative and positive PV array grounding schemes. Its low output leakage and high isolation also allows testing non-isolated (transformer-less) type inverters and micro-inverters.



The maximum output to ground voltage is $\pm 1000V$. Exceeding this limit will damage the unit. This type of damage is not covered by the warranty.

Always connect the sense lines as close as possible to the unit under test to maximize measurement accuracy.

3.3.1 Microinverter test setup


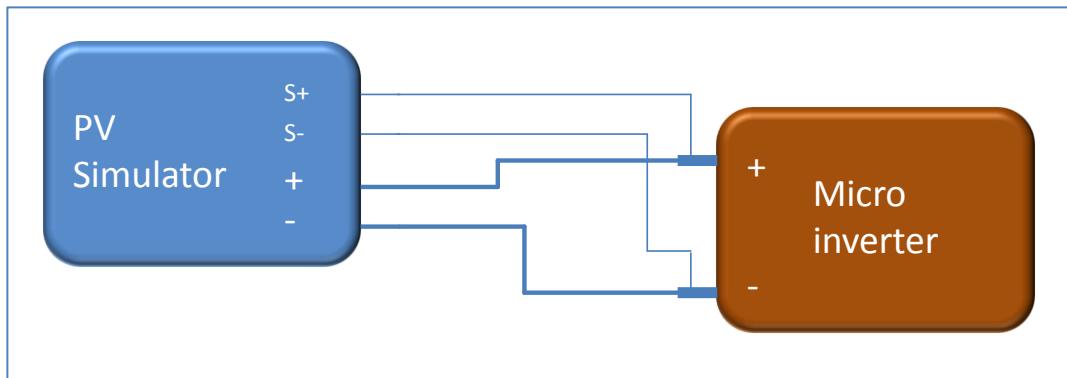


Figure 3-5 Microinverter test setup

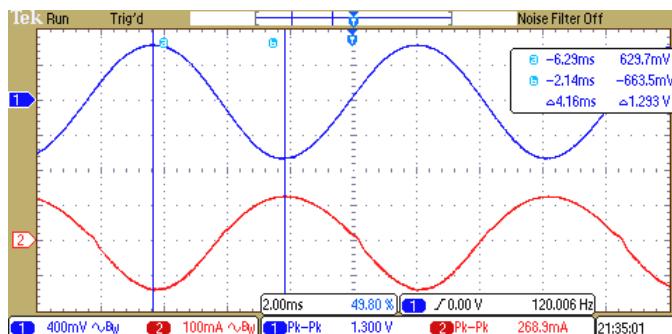

Typical voltage and current waveforms observed across the input of the microinverter are shown in this oscilloscope capture, which was taken while the unit under test was tracking the maximum power point.

3.3.2 Power optimizer test setup

This setup allows testing a single power optimizer while fully controlling and monitoring its operating parameters, including output voltage and current.


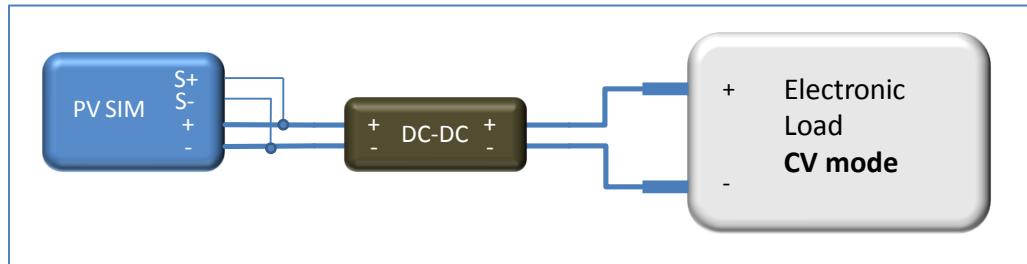


Figure 3-6 Test setup for a single power optimizer

Typical voltage and current waveforms observed across the input of the optimizer are shown in this oscilloscope capture, which was taken while the unit under test was tracking the maximum power point.

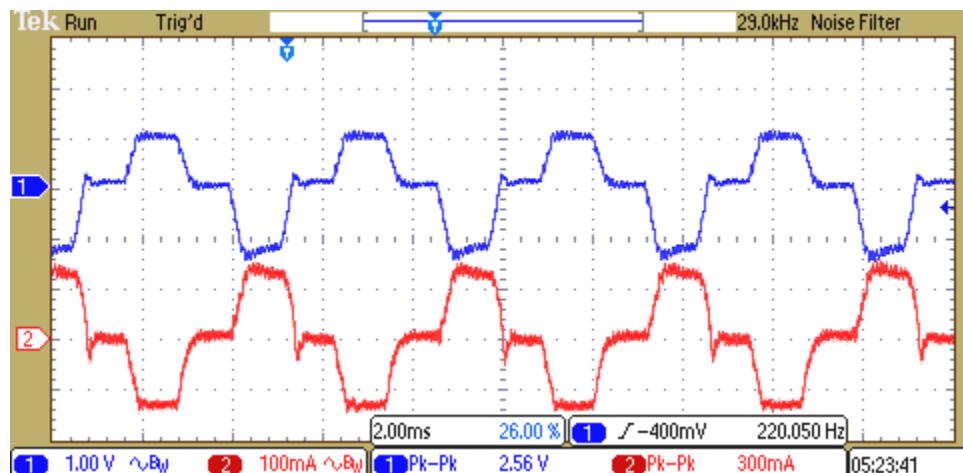

3.3.3 Power optimizers feeding a solar inverter

Several ETS150 simulators can be connected as shown below to accurately evaluate their operation and performance while feeding a solar inverter.

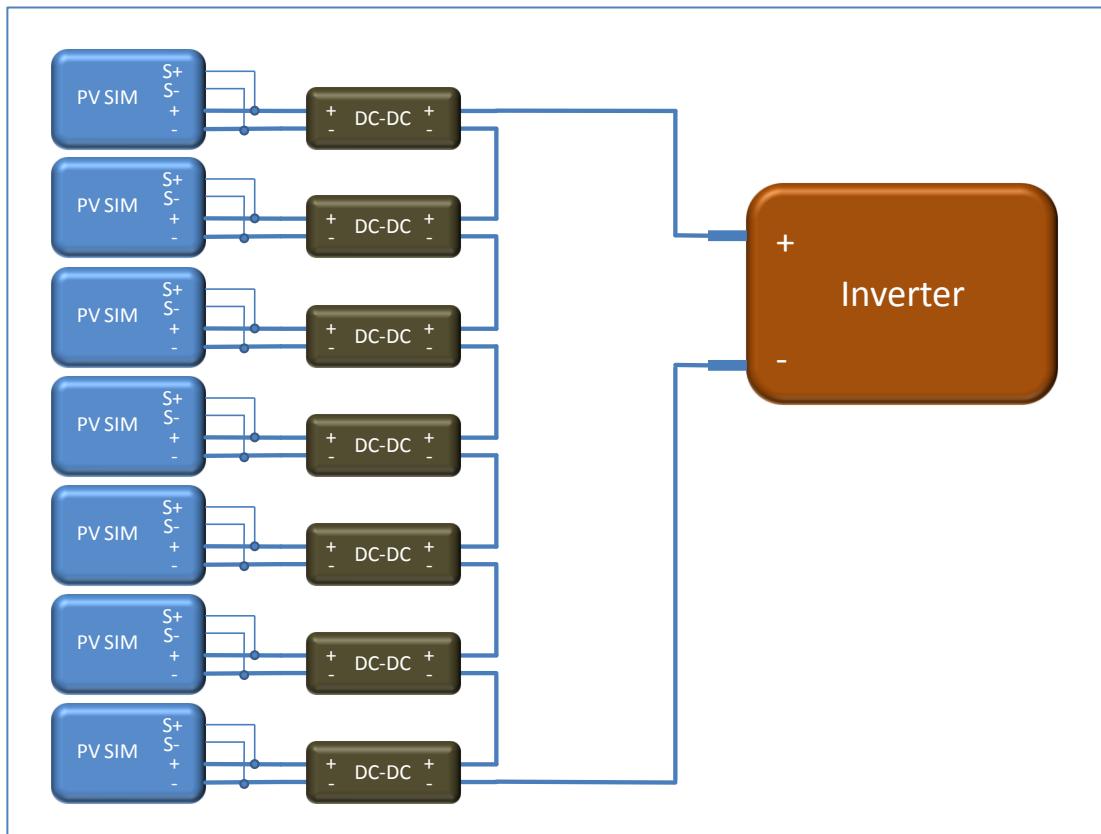


Figure 3-7 Power optimizers feeding a solar inverter

The maximum number of simulators and optimizers is limited by the following factors:

- The sum of all V_{oc} settings must be equal to or less than the maximum input voltage of the inverter.
- The maximum voltage-to-ground of either inverter input terminal (+ or -) cannot exceed $\pm 1,000$ V peak or the maximum string voltage of the optimizers, whichever is lower.
- For transformerless inverters, the AC leakage current must not exceed the threshold of the inverter's RCMU protection (residual current monitoring unit), usually 30 mA rms. The actual current level depends on the amplitude, frequency and harmonics content of the AC component present at the inverter input terminals which ultimately depends on the inverter design.

The AC leakage current can be estimated using the equation below:

$$I = C * 6.28 * f * V * N$$

With the setup example shown above, the AC leakage current I would be approximately 12 mA rms when there is no harmonics content, $f=60$ Hz and $V=100$ V rms, since $N=7$ and the output-to-ground leakage capacitance of each ETS150 is 45 nF.

3.3.4 Parallel connections

The outputs of two or more ETS150 simulators can be paralleled to increase the available output current. All sense lines must be connected and terminated as close as possible to the inverter under test to achieve the best possible measurement accuracy.

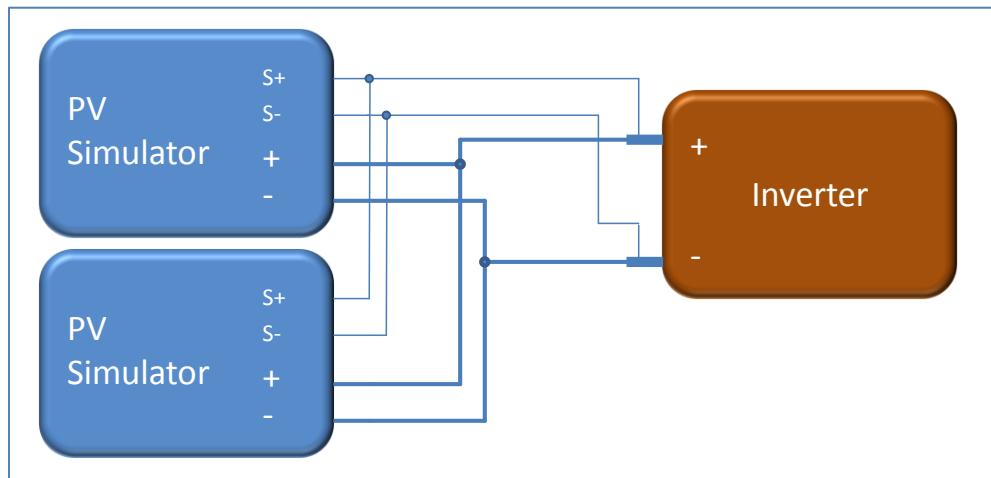


Figure 3-8 PV Simulators connected in parallel

Once the electrical connections are made, select **System > Channels grouping setup** to configure the software for the desired wiring. See the software user manual for full details.

The output wiring must be sized to minimize voltage drops at the maximum rated current of the inverter. The voltage difference between the simulator output and the inverter input must not exceed 2 V.

3.3.5 Series connections

Up to three ETS150 simulators can be connected in series to achieve output voltages of up to 450 V. See electrical connections below.

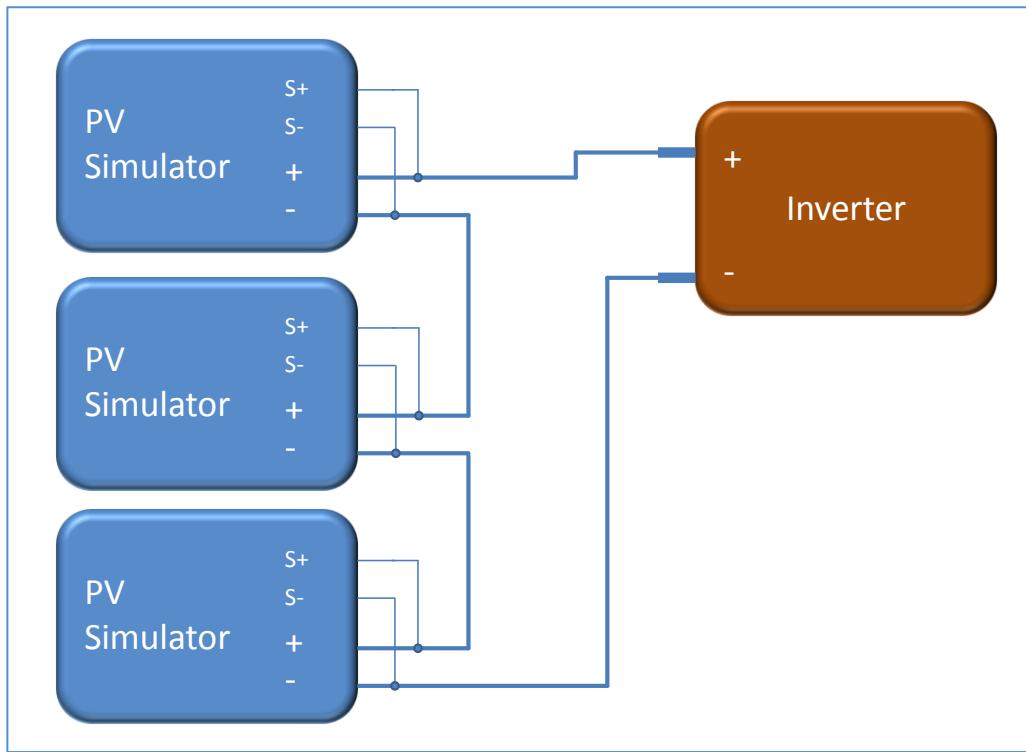


Figure 3-9 PV Simulators connected in series

Once the electrical connections are made, select **System > Channels grouping setup** to configure the software for the desired wiring. See the software user manual for full details.

Series connections are not recommended and should only be used as a last resort when PV simulators with the appropriate output voltage cannot be procured. Main areas of concern are:

- Measurement accuracy and response speed are negatively affected.
- Overvoltage protection levels under transient conditions can be inaccurate and can deviate from the programmed values.
- Since one simulator in the string executes a slice of the programmed IV curve while the others are set to a fixed voltage to deliver the desired total V_{oc} , operation at fill factors below 0.7 can lead to noticeable IV curve distortions below V_{oc}/N where N is the number of series-connected simulators.


SECTION 4

COMPUTER MANAGEMENT

4.1 PERFORMING TERRASAS SOFTWARE UPDATES

4.1.1 Step 1: Uninstall TerraSAS



Click on the Windows 7 logo and select Control Panel:

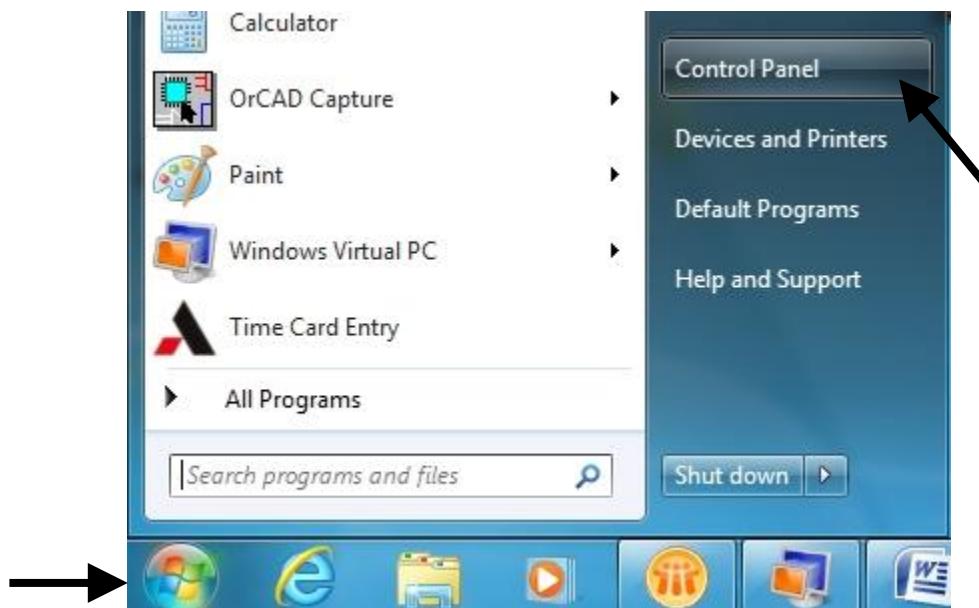

Click on Uninstall a program




Right click on TerraSAS and click Uninstall/Change

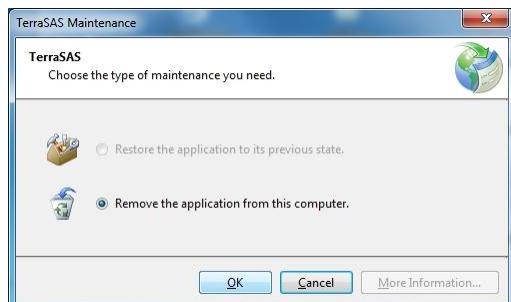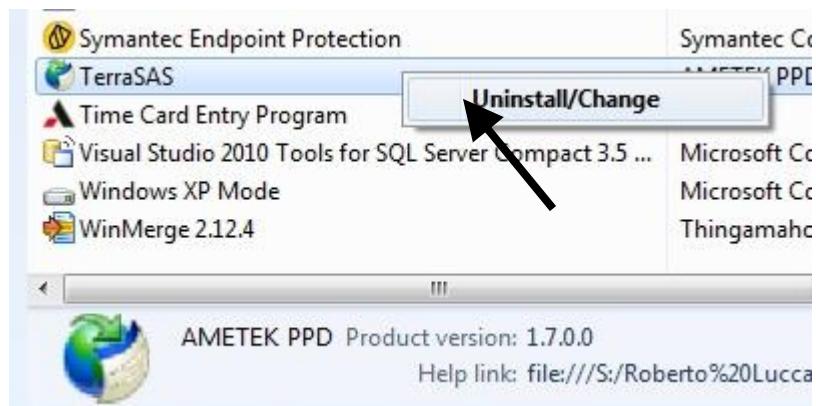


Click OK to remove TerraSAS. This only removes the software. System configuration, curves, profiles, data log and any other user files are not affected.

4.1.2 Step 2: Install a new TerraSAS software release

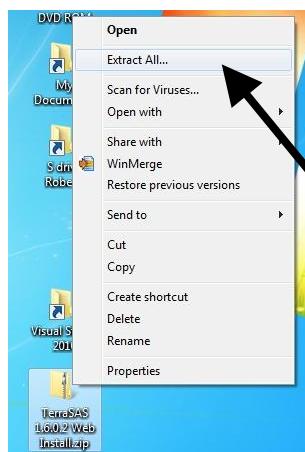


A new TerraSAS install set is usually e-mailed as a download link through Ametek's file transfer service Amefex. The file size is less than 10 Mbytes.


Download the file to your desktop, then right click on it and select **Extract All**.

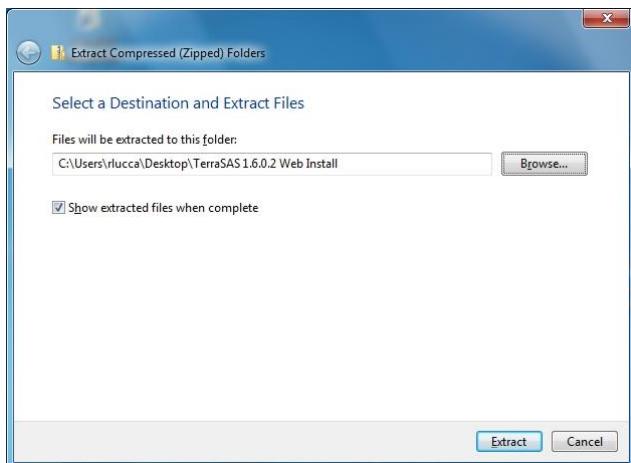

Click **Browse...**

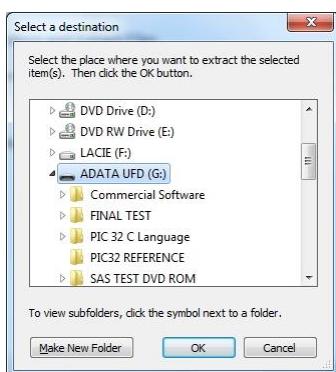


Insert a USB drive and navigate to it. Click **OK** and then click **Extract** on the previous dialog to store the install set on the USB drive.

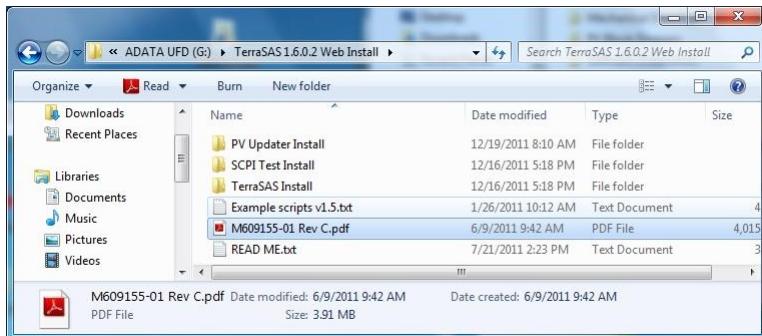

Insert the USB drive into any available USB port on the computer running TerraSAS.

Navigate to the TerraSAS x.x.x.x Web Install folder. Open the READ ME file and, if instructed to do so, execute section 4.2 to update the PV simulator firmware.

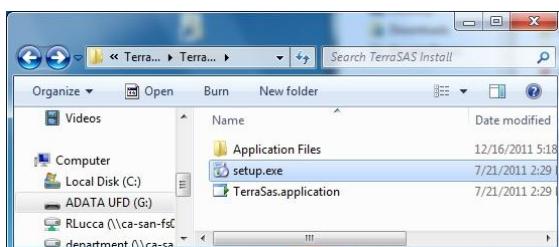

Open the folder named **TerraSAS Install** and double click on the **setup.exe** file.



Follow the instructions and then accept the security warning by clicking on the **Install** button.

The updated TerraSAS software will launch as soon as the above dialog will complete.

To complete the process, copy the updated software user manual (M609155-01 Rev X.pdf) and Example scripts vX.X to your **My Documents** folder.


4.2 PERFORMING FIRMWARE UPDATES

This procedure updates the computer code running on the two embedded processors within the PV simulator:

- Refer to the screenshots in section 4.1.2 to download and install the **PV Updater** software on the TerraSAS control computer. If a previous version of the PV Updater is present, refer to the screenshots in section 4.1.1 to remove it.

All PV simulators connected to the computer will be updated. In case it is not desired to update some of the simulators that are present on the network, turn them off before starting the process.

- Turn off all PV simulators. Locate the 8-position switch on the rear side of the PV simulators (see figure 1-5)
- On all PV simulators, slide the F5 switch to the ON position
- Turn on all PV simulators. Note that the front panel **STATUS** LED does not blink as usual, as PV simulators entered firmware update mode. Wait 10 seconds to allow all simulators to acquire an IP address.

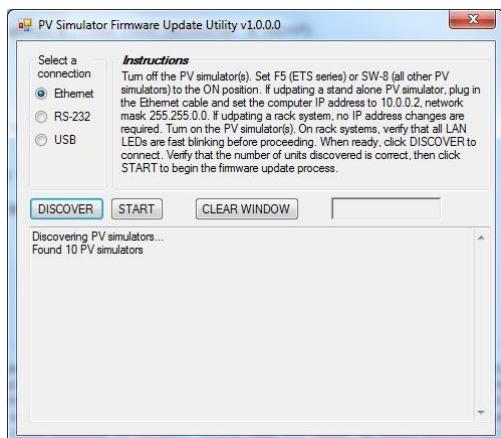


Double click on the PV updater icon to start the firmware update utility.

Click on the **DISCOVER** button to connect.

Verify that all PV simulators are detected

Click on the **START** button to begin.

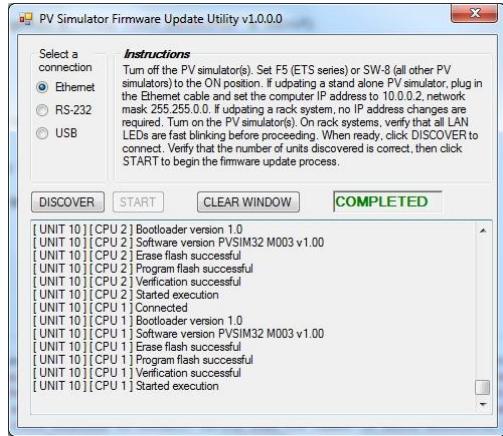

The process takes about one minute for each simulator, during which activity details are displayed. When all PV simulators are successfully updated, a green **COMPLETED** sign is shown.

If any step fails on one or more units, a red **FAILED** sign is displayed. In this case, scroll the activity window to locate which unit failed to update and then contact the factory for assistance.

- Turn off all PV simulators.
- On all PV simulators, slide the F5 switch back to the OFF position
- Turn on all PV simulators.
- Confirm the STATUS LED blinks as usual on all PV simulator front panels.
- Continue to section 4.1.2 to update the TerraSAS software and complete the process.

Note: the firmware update process can be repeated as many times as desired in the unlikely case that something goes wrong. However, after one or two failed attempts, it is strongly suggested to contact the factory for assistance.

IMPORTANT: avoid shutting down power, turning off the computer or the PV simulators while a firmware update is in progress. While these events have been extensively tested and caused no harm during software verification, it is advisable to refrain from intentionally causing them.

This page intentionally left blank.

SECTION 5

CALIBRATION

5.1 REQUIRED EQUIPMENT

The Elgar PV simulator supports fully automated calibration, which requires the following equipment, software and associated documentation:

- Agilent model 34401A or Keithley 2000 Digital Multimeter
- TerraSAS Calibration Suitcase, Elgar p/n 5609175-01
- TerraSAS Calibration software v2.0.0.1 or above, Elgar p/n 5609174-XX
- TerraSAS Calibration User Manual, Elgar p/n M609174-01

5.2 OPERATION

The calibration suitcase has an internal, calibrated precision shunt. It connects to the simulator output, the digital multimeter and the AUX I/O connector on the rear panel.

All cables and accessories are included in the suitcase.

After installing and running the software, the user is guided through a simple procedure, which takes about five minutes to complete.

5.3 CALIBRATION INTERVAL

The recommended calibration interval for all Elgar PV Simulators is one year.